

Fowler 3500 gallon tender – additional coal rails

Push through rivets, and fold up front coal rails [B53]. Fit left [B54] and right [B55] uprights, and angles [B56]. File beading on inner (rear) face of front fender, and fix assembly in place, taking care that lip on uprights rests on top edge of beading.

Push through rivets, and fold up rear coal rails [B57], and again add angles [B56]. File beading on inner (front) face of rear fender, and fix rear coal rail assembly in place.

Similarly, push through rivets, and fold up left [B58] and right [B59] coal rails, noting that support strips are curved. Add angles [B60]. File beading inside tender sides, and fix in place, noting that the side coal rails fix outside the ends of the front and rear rails.

